
miniPAR

TE-X18RGB

USER MANUAL

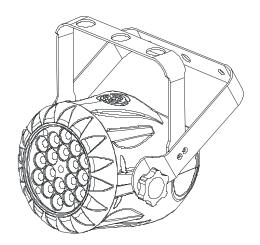



ADD: 19 Lacist St. Wesbrark, Maine, U.S.A. (04092) Phonel: (1) 207-712-3004

TABLE OF CONTENTS

PART 1	PRODUCT (GENERAL)	1.
	1.1PRODUCTINTRODUCTION	1.
	1.2PRODUCT FEATURES	
	1.3-TECHNICAL SPECIFICATIONS	
	1.4PHOTOMETRIC DATA	
	1.5SAFETY WARNING	
PART 2	INSTALLATION	5.
	2.1MOUNTING	5.
	2.2POWER CONNECTION	
	2.3SETTING UP WITH A DMX512 CONTROLLER	6.
	2.3-1DMX512 A DDR ESSING WITHOUTID ADDRESSING	6.
	2.3-2DMX512 AD DRESSING WITHID ADDRESS	6.
PART 3	DISPLAY PANEL OPERATION	7.
	3.1BASIC	7.
	3.2MENU	6.
	3. 3STATIC	9.
	3.4AUTO	.9.
	3.5A DDRESS	. 9.
	3.6RUN	. 10.
	3.7PERSON	10.
	3.8ID	10.
	3.9EDIT	.10.
	3.10SETTINGS	.11.
	3.11PASSWORD	.11.
	3.12SAVE	.11.
PART 4	USING A DMX512 CONTROLLER	12.
	4.1 BASIC ADDRESSING	.12.
	4.2CHANNEL ASSIGNMENT	.12.
	4.3BASIC INSTRUCTIONS FOR DMX512 OPERATION (STAGE 1)	
DADTS	APPENDIX	16
1 41/13	5.1TROUBLE SHOOTING	_
	5.1TROUBLE SHOUTING	

1 PRODUCT (GENERAL)

1.1 PRODUCT INTRODUCTION

This product is designed for indoor use. Suitable applications include wash or effect lighting for architectural, stage or nightclub applications. This product can also be installed for use in signage and advertising using the dynamic functions available with DMX512 control. Direct input of DMX512 signal allows the units to be controlled from any DMX512 controller. This product can be operated as a single unit or in multiple units for large applications.

The specially developed controller that allows the product to be controlled independent of the DMX512 controllerenables the user to create and edit a wide range of custom programs. All programs can be touch-button displayed or scheduled to START and END at scheduled times. When programs have been created or edited in the controller, it is also possible to trigger these programs using the DMXIN function when connected to a DMX512 controller.

1.2 PRODUCT FEATURES

LED FIXTURE

- * RGB Dim mer 0-100%
- * Strobe
- * Automatic programs
- * LCD display
- * Display control 'lock-out'
- * Direct DM X512 input
- * Independant ID address
- * Stand-alone/ Slave


1


ADD: 19 Lacist St. Wesbrark, Maine, U.S.A. (04092) sales@te-lighting.com
Phonel: (1) 207-712-3004 http://www.te-lighting.com

1.3 TECHNICAL SPECIFICATIONS

LED M ODULE

LED MODUL E:	
Vo Ita g e	1 00~240 V50/6 0Hz
Rated Power	30W
LED/Un it	18pcs(6xRED/6xGREEN/6xBLUE)
Output/LED	1W
En vironment Tem per at u re	-20℃~40℃
Co ol in g	Forced air convection
Dimensions	200 x 1 98 x 148 mm
Weig ht	2.5Kg

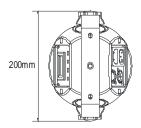

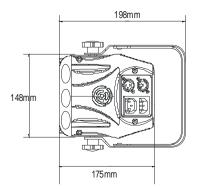


Phonel: (1) 207-712-3004


1.4 PHOTOMETRIC DATA

PHOTOMETRIC DATA


RED




GREEN



BLUE



RGB



Phonel: (1) 207-712-3004

1.5 SAFETY WARNING

IMPORTANT

[ALWAYS READ THE USER MANUAL BEFORE OPERATION.] [PLEASE CONFIRM THAT THE POWER SUPPLY STATED ON THE PRODUCT IS THE SAME AS THE MAINS POWER SUPPLY IN YOUR AREA.]

- T his product must be installed by a qualified professional.
- Always operate the equipment as described in the usermanual.
- •A minimum distance of 0.5m must be maintained between the equipment and combustible surface.
- The product must always be placed in a well ventilated area.
- Always make sure that the equipment is installed securely.
- DO NOT stand close to the equipment and stare directly into the LED light source.
- Always disconnect the power supply before attempting and maintenance.
- Always make sure that the supporting structure is solid and can support the combined weight of the products.
- The earth wire must always be connected to the ground.
- Do not touch the power cables if your hands are wet.

ATTENTION

AATTENTION**A**

- This product left the place of manufacture in perfect condition. In order to maintain this condition and for safe operation, the user must always follow the instructions and safety warnings described in this user manual.
- A void shaking or strong impacts to any part of the equipment.
- Make sure that all parts of the equipment are kept clean and free of dust.
- Always make sure that the power connections are connected correct and secure.
- If there is any malfunction of the equipment, contact your distributor immediately.
- When transferring the product, it is advisable to use the original packaging in which the product left the factory.
- Shields, lenses or ultraviolet screens shall be changed if they have become damaged to such an extent that their effective ness is impaired.
- The lamp (LED) shall be changed if it has become damaged or thermally deformed.

Phonel: (1) 207-712-3004

2 INSTALLATION

2.1 MOUNTING

HANGING

The LED PAR can be mounted in a hanging position using the supporting bracket. The bracket should be secured to the mounting truss or structure using a standard mounting clamp. Please note that when hanging the unit a safety cable should also be used.

UPRIGHT

The LED PAR can be mounted in an upright or sitting position using the supporting brackets.



The LED MODULE can be mounted at any angle and in any position. It is possible to further adjust the angle of the LED MODULE using the two adjustment knobs located on the side of the fixture.

2.2 POWER CONNECTIONS

@ 220V: 40 units may be connected in series

@ 120V: 20 units may be connected in series

Note: As this fixture's DMX signal cable connection had been changed to Parallel connection, so if over 30 units to be connected, then a DMX signal amplifier is needed.


5

2.3 SETTING UP WITH A DMX512 CONTROLLER

2.3-1 DMX512 ADDRESSING WITHOUT ID ADDRESSING (STAGE 1 MODE)

- Connect the DMX512 controller to the units in series.
- Each unit has 9 DMX channels so the DMX Addresses should increase by increments of 9 (e.g. 1,10,19,28...)
- •The ID address has not been set so therefore when using the controller Ch9 must be inactive (CH9=0).
- Each DMX Address may be used as many times as required.
- Any DMX address in the range from 001 to 512 may be used.

Example:

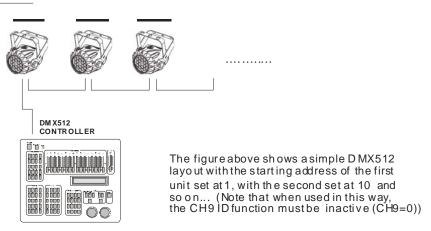

2.3-2 DMX512 ADDRESSING WITH ID ADDRESS (STAGE 1 MODE)


- Connect the DMX512 controller to the units in series
- Each unit has 9DMX channels so the DMX Addresses should increase by increments of 9 (e.g. 1,10,19,28...)
- Each D MX Address may be used as many times as required.
- Any DMX address in the range from 001 to 512 may be used.

ADD: 19 Lacist St. Wesbrark, Maine, U.S.A. (04092)


- Each D MX address may carry up to 66 separate ID addresses.
- **[ID]** should be set in the menu on each unit in ascending values (i.e. 1,2,3...)
- ID add resses are accessible from Ch 9 on the DMX512 controller.

Phonel: (1) 207-712-3004

Example:

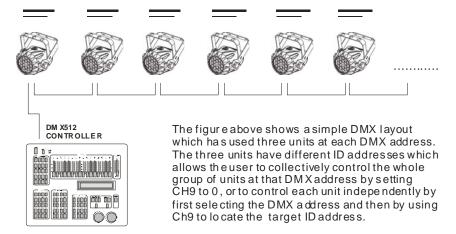

3 DISPLAY PANEL OPERATION 3.1 BASIC

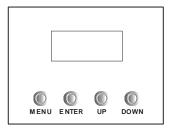

[MENU] scroll through the main menu or exit from the current menu or function


[ENTER] Enter the currently selected menu or confirm the current function value

[UP] scroll 'UP' through the menu list or increase the value of the current function


[DO WN] scroll 'DO WN' through the menu list or decrease the value of the current function

Phonel: (1) 207-712-3004

3.2 MENU

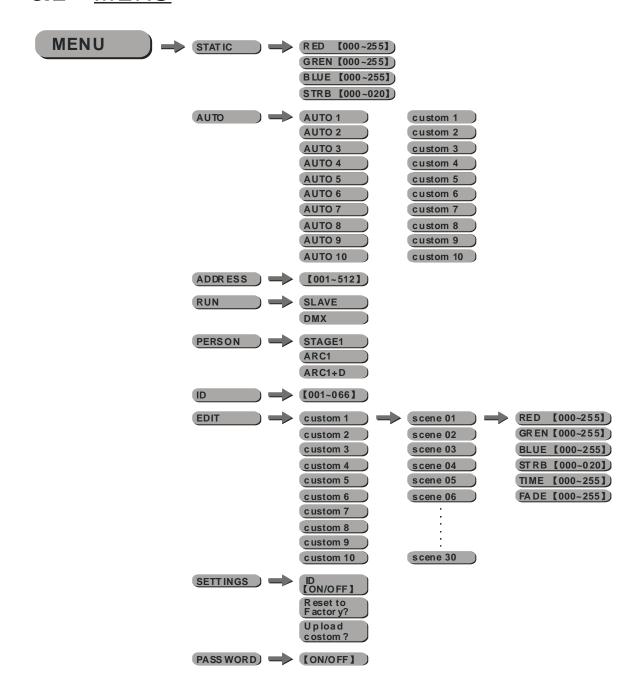


3.3 STATIC



[STATIC]

• Select [RED] / [GREN] / [BLUE] / [STRB] to set the value

3.4 AUTO

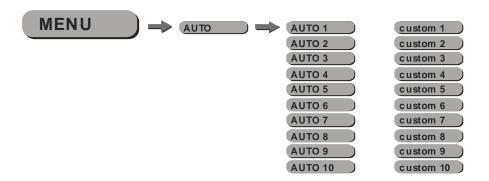

[AUTO]

- Select the target 【AUTO】 program and press 【ENTER】
- Programs [AUTO 1] to [AUTO 10] are fully pre-programmed and will not be altered
- Programs [Custom 1] to [Custom 10] are fully pre-programmed and can be edited

3.5 ADDRESS



[ADDRESS]

● Enter 【ADDRESS】 and set the DMX address 【001~512】

3.6 RUN



[RUN]

● Enter 【RUN】 to choose 【SLAVE】 or 【DMX】 working mode

3.7 PERSON



[PERSON]

● Enter [PERSON] and select [STAGE1] / [ARC1] / [ARC1+D] DMX mode


3.8 ID



[ID]

Enter [ID] and set the ID address [001~066]

3.9 EDIT

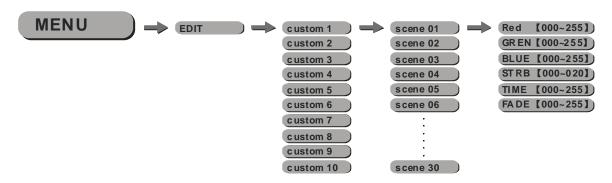

[EDIT]

Enter **(EDIT)** to edit the custom programs **(custom1)** to **(custom10)** Each program has 30 steps to edit

Each step allows a creation of a scene using RED, GREEN, BLUE, STRUBE, TIME, FADE

10

3.10 SETTINGS



[ID]

Choose [ON] / [OFF] to open or close ID

[Reset to Factory?]

This function will reset all setting to the original factory setting

[Upload custom?]

Select [*Up load custom?*] to upload the cus tom programs from the current MASTER unit to the SLAVE units

3.11 PASSWORD



[PASSWORD]

Choosing ON, the operation board will be underpassword protection after 30s without operation

Choosing OFF, you will be able to operate at any time freely

3.12 SAVE

Only the main menu and the Auto-programs submenu can be protected Repower the unit, it will back to the main menu

Phonel: (1) 207-712-3004

4 USING A DMX512 CONTROLLER

4.1 BASIC ADDRESSING

- Connect all of the units in series using standard DMX512 signal cable or the IP65 rated cable provided.
- Set the DMX512 address in the [DMX] menu.
- It is possible to have the same DMX address or independent addresses for each fixture.

4.2 CHANNEL ASSIGNMENT

• Note: This product have three DMX512 channel configuration: 【STAGE 1】, 【ARC 1】 and 【ARC 1+D】

STAGE 1

CHANNEL	VALUE	FUNC TION
		DIMMER
1	0<⇒≥255	
		RED
2	0<⇒≥255	Ch2 will control the TIME if Ch7 choose custom01-10
-		GRE EN
3	0<≒>255	Ch3 will control the FADE if Ch7 choose CUSTOM01-1
		BLUE
4	0⇐⇒255	
		MAR CO
	0<⇒>10	No function
	11⋘35	RED 100% / GREEN UP / BLUE 0%
	36≪⇒60	RED DOWN/GREEN 100%/BLUE 0%
	61≪⇒85	RED 0% / GREEN 100% / BLUE UP
	86≪⇒110	RED 0% / GREEN DOWN / BLUE 100%
	111<>135	RED UP / GREEN 0% / BLUE 100%
	136<⇒160	RED 100% / GREEN 0% / BLUE DOWN
	161<⇒>185	RED 100% / GREEN UP / BLUE UP
	186≪⇒210	RED DOWN / GREEN DOWN / BLUE 100%
5	211<⇒≥215	WHITE 1:3200K
	216<=>220	WHITE 2:3400K
	221<⇒>225	WHITE 3: 4200K
	226<=>230	WHITE 4:4900K
	231⇐⇒235	WHITE 5:5600K
	236<≒>240	WHITE 6:5900K
	241<⇒>245	WHITE 7:6500K
	246<=>250	WHITE 8:7200K
	251<⇒≥255	WHITE 9:8500K
		STRO BE
6	0<⇒>10	No function
	11<⇒≥255	Str ob e speed
	I	12

ADD: 19 Lacist St. Wesbrark, Maine, U.S.A. (04092) sales@te-lighting.com
Phonel: (1) 207-712-3004 http://www.te-lighting.com

CHANNEL	VALUE	FUNCTION
		AUTO
	0<⇒>20	No function
	21⇐⇒30	AUTO 1
	31<⇒>40	AUTO 2
	41<⇒>50	AUTO 3
	51<⇒>60	AUTO 4
	61<⇒>70	AUTO 5
	71<⇒>80	AUTO 6
	81<⇒>90	AUTO 7
	91<⇒>100	AUTO 8
	101<⇒>110	AUTO 9
7	1114⇒120	AUTO 10
	121⇐⇒130	CUSTOM 1
	131<⇒>140	CUSTOM 2
	141⇐⇒150	CUSTOM 3
	151⇐⇒160	CUSTOM 4
	161⇐⇒170	CUSTOM 5
	171⇐⇒180	CUSTOM 6
	181⇐⇒190	CUSTOM 7
	1914⇒200	CUSTOM 8
	201⇐⇒210	CUSTOM 9
	211⋘220	CUSTOM 10
	221⇐⇒255	No function
8		AUTO SPEE D ADJUSTMENT
	0 ⇐⇒ 255	When using CH7,AUTO01-AUTO9, this function activated
		IDADDRESS
	0 ⇐⇒9	ID1~ID66
	10⇐⇒19	ID1
	20⇐⇒29	ID2
	30⇐⇒39	ID3
	40 ⇐⇒ 49	ID4
	50≪⇒59	ID5
	60⇔69	ID6
	70⇐⇒79	ID7
9	80⇐⇒89	ID8
	90⇔99	ID9
	100⇔109	ID10
	110 ⇐⇒ 119	ID11
	120⇐⇒129	ID12
	130⇐⇒139	ID13
	140⇔149	ID14
	150⇔159	ID15
	160⇐⇒169	ID16
	170⇐⇒179	ID17
	180⇐⇒189	ID18
	190⇐⇒199	ID19
	I	I

13

CHANNEL	VALUE	FUNC TION
	200⇔209	ID20
	210	ID21
	211	ID22
9	•	
	253	ID64
	254	ID65
	255	ID66

ARC 1

CHANNEL	VALUE	FUNC TION
1	0<⇒≥255	RED
2	0<⇒≥255	GRE EN
3	0<⇒≥255	BLUE

ARC 1+D

CHANNEL	VALUE	FUNC TION
1	0⇐⇒255	MAS TER DIM MER
2	0<⇒≥255	RED
3	0<⇒≥255	GRE EN
4	0≪⇒255	BLUE

Phonel: (1) 207-712-3004

4.3 BASIC INSTRUCTIONS FOR DMX512 OPERATION (STAGE 1)

MASTER DIMMER

- CH1 controls the intensity of the currently projected color
- When the slider is at the highest position (255) the intensity of the output is the maximum

RED, GREEN & BLUE COLOR SELECTION

- CH2, CH3 & CH4 control the intensity ratio of each of the RED, GREEN & BLUE LEDs.
- When the slider is at the highest position (255) the intensity of the coloris the maximum.
- CH2, CH3 & CH4 can be combined together to create over 16 million colors.

COLOR MACROS

- CH5 selects the required CO LOR MACRO
- CH5 has priority over CH2, CH3, CH4 and CH6
- CH1 is used to control the intensity of the COLOR MACRO

STROBE

• CH 6 controls the strobe of CH1 to Ch5

ID ADDRESS SELECTION

- CH9 is used to select the target ID address.
- Each independent DMX address may have upto 66 independent ID addresses.
- An ID address of 0 will activate all ID address locations.

AUTO

- CH7 selects the preset AUTO programs AT. 01-AT10 or the custom AUTO programs PR.C1-PR.10
- When activating the custom AUTO programs PR.C1 to PR.10 then it is possible to control the Step time and fade time using Ch2 and Ch3 respectively.

Phonel: (1) 207-712-3004

5 APPENDIX


5.1 TROUBLE SHOOTING

LED MODULE

SITUATION	CAUSE	ACTION
	1) Power connection error	1) Check all power connections
	2) Power switch damaged	2) Replace power switch
No display	3) Display board damaged	3) Replace display board
	4)Fuse damaged	4)Replace the Fuse
LED MODULE on,	1)Keyboard damaged	1) Replace keyboard
but no control from display	2) Display board damaged	2) Replace display board
LEDs of the same color are not lit	LED P CB dama ged	Check and Replace PCB board
LED module on,	1) MAIN PCB damaged	1) Replace main PCB board
LEDs of all colors are not lit	2)LED PCBdamaged	2) Replace PCBboard
	1) Signal connection error	1) Check and replace signal cable
Displaynormal, butnoresponse	2) DM X Address error	2) Che ck and reset DMX address
to DMX 512 controller	3) Master & slave mode error	3) Check and reset the working mode
	4) ID e rror	4) Check and reset ID address

Phonel: (1) 207-712-3004

5.2 MAINTENANCE

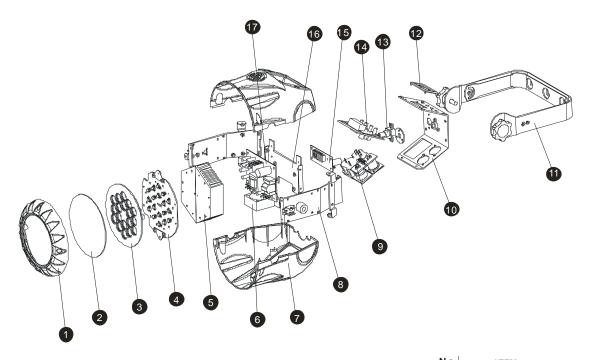

Νo	ITEM
1	Pla stic cover
2	du stproof g lass
3	Le ns wheel
4	Le d board
5	Cooling
6	Fans
7	Pla stic sid e cover
8	Sid e board
9	DM X board
10	Dis play support
11	Holder
12	LCD plastic cover
13	Fu se sock et
14	Ma in board
15	Dri ver board
16	Po wer board
17	Switch

